 
 

 


937004-937015

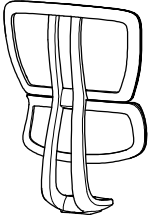

S1X1
M4x20



S5 X10
M6x16x1.2



S2X2
M6x20



S6X3
M8x22x1.2



S3X4
M6x25



S8X1
M6



S4X3
M8x30




S9X1
M5




S7X4
M6x16




1.

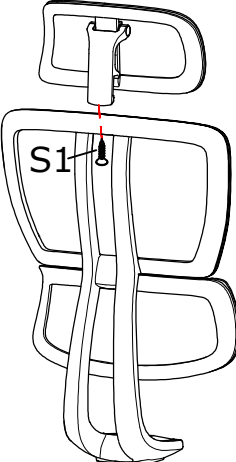


2.

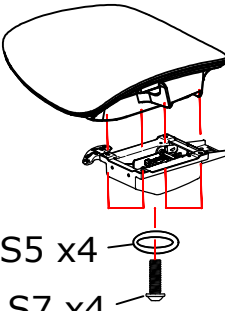


3.

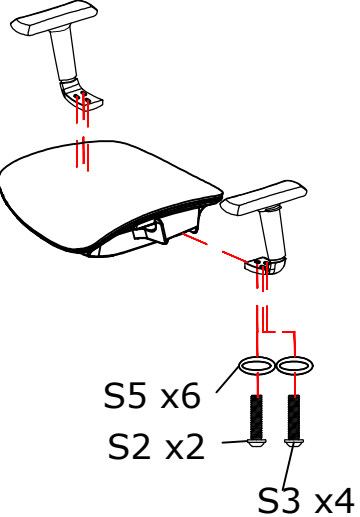

4.

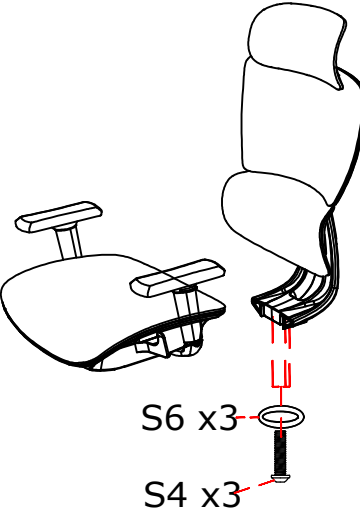

5.

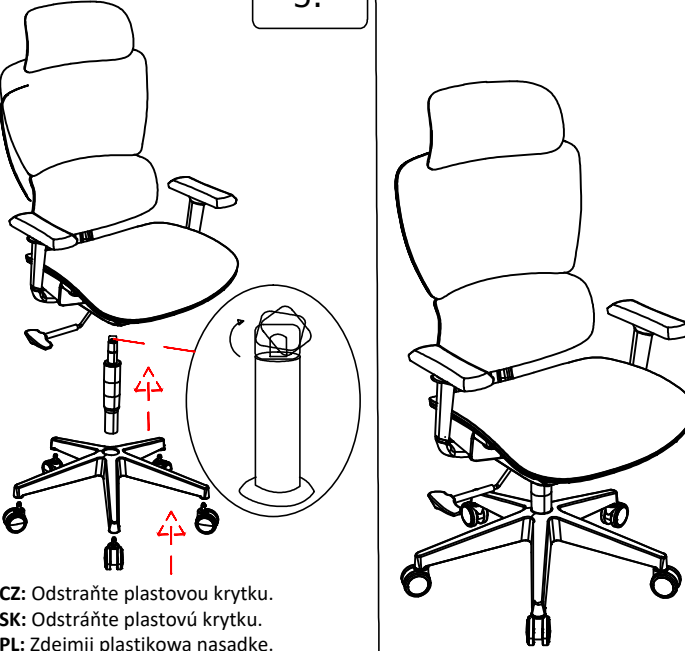

CZ: Odstraňte plastovou krytku.
SK: Odstráňte plastovú krytku.
PL: Zdejmij plastikową nasadkę.
DE: Entfernen Sie die Kunststoffabdeckung.